



An ISO 9001:2015 Company

SAFETY PERSONAL AC VOLTAGE (50 or 60Hz) PROXIMITY DETECTOR 288SVD



INSTRUCTION MANUAL

TABLE OF CONTENTS

SAFETY RULES	01
GENERAL DESCRIPTION	02
PRINCIPLE OF HOW IT WORKS	02
CHECK IT AND GET IT GOING	03-04
Check the working of the voltage detector	03
Low battery detection and indication	03
Sensitivity	03
Priority of functions - display and sound alerts ..	04
LOW VOLTAGE TESTING	05
FOR BEST RESULTS	05
FRONT PANEL LAYOUT	06
BACK OF voltage detector LAYOUT	07
PREPARATION FOR USE	08
CHECKING AND PROOFING THE TESTER	08
TYPICAL USES	09
BROKEN WIRES IN CABLES	09
NON CONTACT ADVISE	09
LIMITATIONS OF THE voltage detector	10
REPLACING THE BATTERY	10
LABORATORY TEST RESULTS	11
SPECIFICATIONS	12
LIMITED WARRANTY	13

SAFETY RULES

The Personal Safety voltage detector has been designed with safety in mind. However, no design can completely protect against incorrect use.

Electrical circuits are dangerous and lethal through lack of caution or poor safety practice. Please follow safety rules to reduce danger and practice safety.

- Read the User's manual carefully and completely before using the tester. Fully understand the instructions before using this product. Follow the instructions for every test. Take all the necessary precautions. Do not exceed the limits of this instrument.
- The voltage detector should never be in physical contact with any conductor higher than 1kV. This is a proximity detector, not a detector which works by contact. As such, contact should be avoided.
- Always check that the voltage detector is working correctly before and after the test (press both push button to verify it's working perfectly before using the testers to detect voltage and after detection).
- Do not touch any exposed wiring, connections or other "Live" parts of an electrical circuit.
- **This instrument should only be used by a competent, suitably trained person which understands fully this test procedure. Personal working with High Voltage should be trained regularly. Use Protective gear.**



Caution, risk of electric shock.



Caution, refer to the user's manual.

GENERAL DESCRIPTION

The **voltage detector** consists of an internal pickup AC sensor plate, a test (oscillator) and diagnostic circuit, an adjustable threshold comparator, a sound annunciator (buzzer), a visual indicator (super high bright led) and a 9V battery, all enclosed into the robust "beeper" style case.

The enclosure has a built-in clip to be able to be attached on the outer garments / external clothing or belt.

PRINCIPLE OF HOW IT WORKS

The **voltage detector** detects AC voltages using its internal AC sensor plate. The AC sensor plate picks up part of the radiated electric field in volts per meter (V/M).

The electric field is amplified and processed by the internal circuitry and once the processed signal is above the threshold, triggers the input of an integrated circuit, which starts the oscillators for the buzzer and led.

The Buzzer beeps intermittently at a /flash per second.

The "Self-test" actioned by simultaneously on the front panel.

The battery always ON. priority of panel.



and Led lights rate of 2 beeps

diagnostic is depressing both push button

monitoring is Please see the alert on the front

CHECK IT AND GET IT GOING

After inserting the battery, close the cover. The **voltage detector** will be ON automatically.

1- Check the working of the voltage detector

Once the battery has been inserted, wait for a few seconds. If no beep and no flash occurs, press simultaneously the 2 push buttons.

While the 2 push buttons are pressed, the internal 50/60Hz oscillator will start oscillating (generates test signal) and this signal will be connected to the sensor.

While pressing the 2 push buttons, the buzzer and the led will function at a rate of about 2 beep/flash per second. That indicates proper operation of the tester.

Release the push buttons, and wait for about 30 seconds. If there are no other beep/flash, that means everything is correct.


2- Low Battery detection and indication

When the battery becomes low, a beep/flash will happen about every 5 seconds. Replace the battery immediately.

3- Sensitivity

Covering the voltage detector with any kind of obstructive material could affect its sensitivity. It is advised to wear it outside clothing, clipped on the belt or on the pocket. Please note that the enclosure is static sensitive and can become charged and thus alarm may be triggered by excessive static.

4- Priority of functions - display and sound alerts

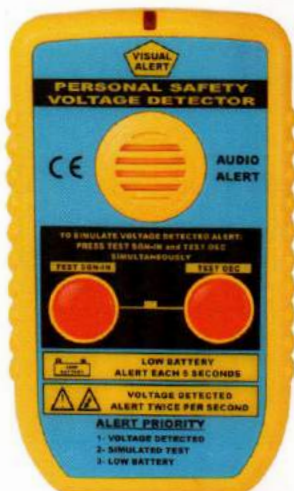

- 1- = Voltage Detected
= First Priority
= the tester beep and flash twice per second.
- 2- = Simulated Test = Voltage Detected
= Second Priority (identical to 1st priority)
= the tester beeps and flashes twice per second.
- 3- = Battery Indication
= Third Priority
= the tester beeps and flashes every 5 seconds.

LOW VOLTAGE TESTING

Physical contact with electrical conductors is not necessary when testing for Live Lines proximity.

This tester works by proximity.

Its sensor senses the radiated field which surrounds live conductors.

It is recommended not to touch High Voltage wires with the voltage detector.

Radiated field strength increases with voltage and decreases quickly with distance or earth shielding.

Detecting distance of a 240Vac single Live Wire is about 10cm.

FOR BEST RESULTS

The voltage detector should always be WORN ON THE OUTSIDE of any clothing.

For example, clipped onto the pocket, belt or on the vehicle's mirror.

The voltage detector could be sensitive to static build-up and may become charged. In this case, this could trigger the alarm.

The voltage detector should be worn FACING THE DIRECTION OF WALKING TOWARD THE SOURCE.

WHILE FACING THE SOURCE, THIS WOULD BE THE FRONT OF YOUR BODY (use the breast pocket).

Always ensure that the alarm can be heard and seen (in case of noisy environment, check again the alarm sound before using to ensure you can be alarmed)

FRONT PANEL LAYOUT



-6-

BACK OF VOLTAGE DETECTOR LAYOUT



-7-

PREPARATION FOR USE

When unpacked, the tester should be inspected for any visible signs of damage, and the preliminary checks described (depress both push button for proofing the unit) should be performed to ensure that it is operating correctly.
If there is any sign of damage, or if the instrument does not operate correctly, return it to your nearest supplier.
This instrument is powered by one 9V type battery. Use alkaline for best results.

CHECKING AND PROOFING THE TESTER

Depress both push button simultaneously. The Buzzer will beep and the LED will flash twice per second if everything is correct with the proofing of the voltage detector.

TYPICAL USES

Workers Safety.
Emergency services protection (fireman, evacuation personal, police, etc...)
Safely identify HV source while approaching it.
The user's has the voltage detector clipped on his breast pocket while working/walking in a electrical environment. The voltage detector will alert the user of any HV source near by and therefore the user will be able to take protective action before being close to the H.V.
Identify and check AC live cables.
Check and Detect Live High Voltage Cables.
Neon lightning servicing.
Tracing live wires.
Detecting of residual or induced voltages.

BROKEN WIRES IN CABLES

Faults in damaged flexible cables are found by applying low voltage to each conductor in turn, earthing the remainder and moving the tester along the cable until the change in condition is obtained (flexible cables as used in mining and building industries are readily repairable when the break in the cable is located).

NON CONTACT ADVISE

It is advised that the tester should not come into contact with cables (kV) as this tester is merely an Non-Contact A.C. Proximity Tester.
This advise is particularly useful to protect users which do not respect protection and safety rules and who do not wear protective gear.
Never work or be alone in the proximity of high voltage.

LIMITATIONS ON THE VOLTAGE DETECTOR

It is recommended that this tester is not used in H.V. Yards of mixed voltages. In the presence of mixed voltages, the user will not be able to pin point exactly which cable is the source of H.V..

This tester has been designed to be used as a personal safety proximity voltage detector alarm.

This is not a measuring instrument.

Problems can be arose when the tertiary circuit of a 275/133/11kV transformer is tested. The electric field of the H.V. And M.V. Bus bars can trigger the detector when it is about 3m above the ground (this is common with most of the electric field voltage detectors and the users should be aware of it).

The tester could pick up adjacent circuit to the one being tested and indicates the wrong information to the user.

REPLACING THE BATTERY

The voltage detector has been designed to have a super low current consumption. One alkaline battery could last up to one year or even more (Depending on the battery energy).

Once the low battery alarm is announced (beeps and flashes every 5 seconds), the battery should be replaced Immediately.

The voltage detector uses one 9V battery.

Remove the battery cover. Ensure polarity is respected and replace with a new battery. (Photograph shows cover removed and new battery inserted).



LABORATORY TEST RESULTS

Test Results

Test Instrument: 100kVAC High Voltage generator


Test Temperature: 25°C

Relative Humidity: 65%

Accuracy: $\pm 20\%$

<u>Source</u>	<u>Angle</u>	<u>Distance</u>
1.0kV	90°	100cm
2.2kV	90°	130cm
3.3kV	90°	155cm
6.6kV	90°	210cm

For best test results, ensure there are no interferences or obstacles on the electric field we want to detect.

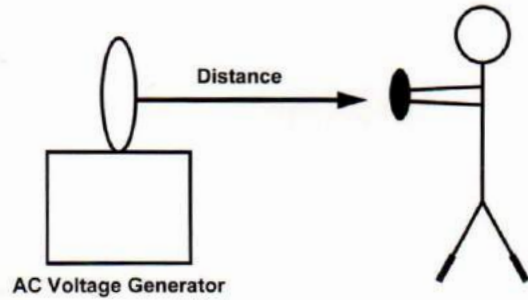

SPECIFICATIONS

ELECTRICAL

Detecting Range

Detection voltage : 240V ~ 50kV

Static can also trigger the voltage detector. Ensure the voltage detector is not reacting to static but AC.

Operating Temperature: -15°C to + 55°C

Storage Temperature: -20°C to + 65°C

Humidity: 93% RH @ 40°C

Dimensions: 115(L)x67(W)x30(H)mm

Weight: 146g. (battery included)

Power Source: 9V battery x1

Safety Standard:

EN 61326 EN 55011 EN 61000-4-2 EN 61000-4-3

WARRANTY

Each "KUSAM-MECO" product is warranted to be free from defects in material and workmanship under normal use & service. The warranty period is one year (12 months) and begins from the date of despatch of goods. In case any defect occurs in functioning of the instrument, under proper use, within the guarantee period, the same will be rectified by us free of charges, provided the to and fro freight charges are borne by you. This warranty extends only to the original buyer or end-user customer of a "KUSAM-MECO" authorized dealer.

This warranty does not apply for damaged Ic's, burnt PCB's, fuses, disposable batteries, carrying case, test leads, or to any product which in "KUSAM-MECO's" opinion, has been misused, altered, neglected, contaminated or damaged by accident or abnormal conditions of operation or handling. "KUSAM-MECO" authorized dealer shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of "KUSAM-MECO".

"KUSAM-MECO's" warranty obligation is limited, at option, free of charge repair, or replacement of a defective product which is returned to a "KUSAM-MECO" authorized service center within the warranty period.

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. "KUSAM-MECO" SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE WHATSOEVER.

All transaction are subject to Mumbai Jurisdiction.

LIST OF PRODUCTS

- * Digital Multimeter
- * AC Clamp Adaptor
- * Thermo Anemometer
- * Distance Meter
- * Network Cable Tester
- * Earth Resistance Tester
- * DC Power Supplies
- * Calibrators
- * Frequency Counter
- * Phasing Sticks
- * Waterproof Pen Testers
- * EMF Detector
- * Wood, Paper & Grain Moisture Meter
- * Transistorised Electronic Analog & Digital Insulation Resistance Testers(upto 10 KV)
- * Digital Sound Level Meter & Sound Level Calibrator
- * Digital contact & Non-contact Type Tachometer
- * Digital Non-contact (infrared) Thermometer
- * Maximum Demand Controller/Digital Power Meter
- * Digital Hand Held Temperature Indicators
- * Digital AC & AC/DC Clampmeter
- * AC/DC Current Adaptor
- * Thermo Hygrometer
- * Digital Lux Meter
- * Power Factor Regulator
- * Digital Panel Meters
- * High Voltage Detector
- * Gas Analysers
- * Function Generator
- * Battery Tester
- * Solar Power Meter



G 17, Bharat Industrial Estate, T. J. Road, Sewree (W),
Mumbai - 400 015. INDIA.

Sales Direct : (022) 24156638, 27754546

Tel. : (022) 24124540, 24181649, 27750662, 27750292

Email : sales@kusam-meco.co.in

Website : www.kusamelectrical.com